INSTALLATION INSTRUCTIONS

Cautions:

- 1 Can not use the electric generator to test the LED lamp.
- 2 Please abide by related country, regional and local law and regulations when install this fixture.
- 3 To avoid electrical shock and damage, please do not install the lights in raining days.

Notices:


- 1 To prevent from electric shock or fire risk, the installation must be conducted by operator who have professional electrical knowledge.
- 2 Please wear gloves to avoid injury before installing lamps.
- 3 During or after installation, if there are situations such as smoke, fire in the wires or lamps, please turn off the power immediately and notify relevant personnel of an overhaul.
- 4. This light can be used for outdoor installation.

Instructions:

This product has 1-10VDC dimming .

Wiring Diagram:

As for the wire color of DIM + and DIM - , pls check the lamp label !

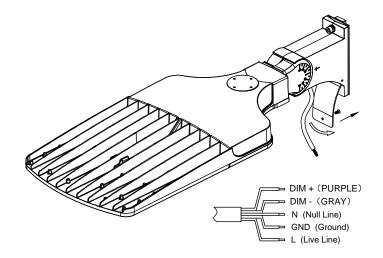

The Installation must be carried out by a qualified electrician.


INSTALLATION INSTRUCTIONS


Parameters

Part No.	Input Voltage	Frequency	Power	Rated Current
KLSBAL100 KLSBAL150W			100W150W	1.65A
KLSBAL200W	AC100-277V	50/60Hz	200W	2.2A
KLSBAL320W			300W	3.3A

Optional Brackets and Installation Instructions


1 There are 2 optional brackets for this fixture. The following is shoebox fixtures with different brackets.

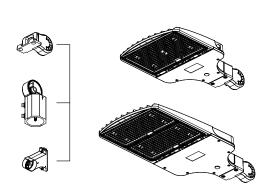

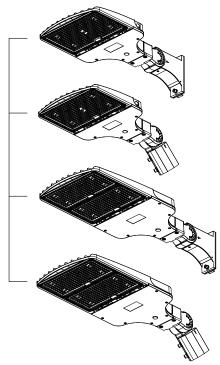


Installation Instruction (Type A)

1.Refer to picture 1 using the machine screws (M8*20) secure the fixed base to the lamp.

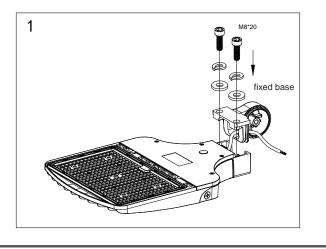

2.Refer to picture 2 using the machine screws (M10*35) secure the lamp holder to the lamp.

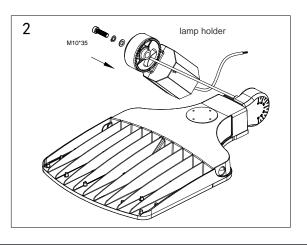


Thank you for ordering our product. If you have any issue, please email it and your order ID to **inquiry@hykodepot.com.**


01

INSTALLATION INSTRUCTIONS


3.Refer to picture 3 connect the wires correctly and put the wires into the lamp pole.

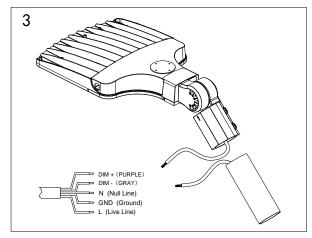

4.Refer to picture 4 using the machine screws (M8*45) secure the lamp holder to the support.

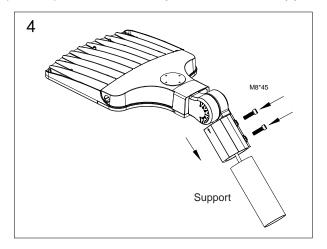


5.Refer to picture 5 locking bolt can be only compatible with a lamp pole that the outer diameter is ϕ 60, lamp adjustable angle is 0-90°.

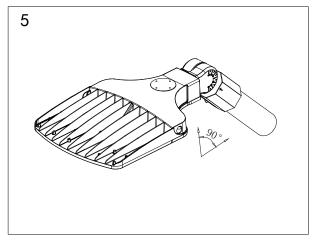


Installation Instruction (Type B)

1.Refer to picture 1 using the machine screws (M8*20) secure the fixed base to the lamp.

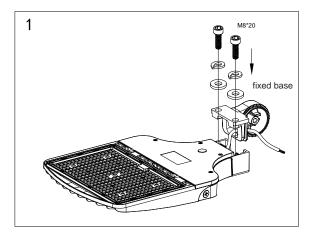


2.Refer to picture 2 using the machine screws (M8*45) secure the lamp holder to the round support.

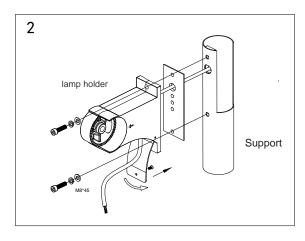


INSTALLATION INSTRUCTIONS

3.Refer to picture 3.1 and 3.2 using the machine screws (M10*35) secure the lamp holder to the lamp holder, connect the wires correctly and put the wires into the lamp pole.

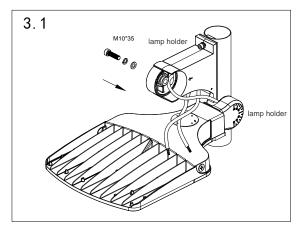



4.Refer to picture 4 using the machine screws secure the lamp holder.

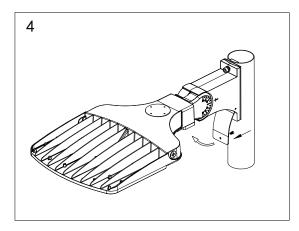


Installation Instruction (Type B)

1.Refer to picture 1 using the machine screws (M8*20) secure the fixed base to the lamp.

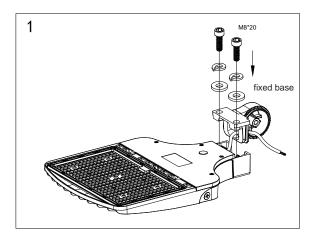


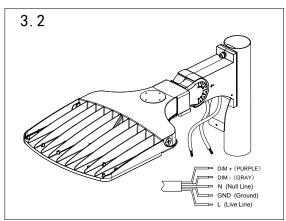

5.Refer to picture 5 locking bolt can be only compatible with a lamp pole that the outer diameter is ϕ 60, lamp adjustable angle is 0-90°.

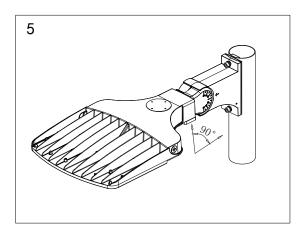


2.Refer to picture 2 using the machine screws (M8*45) secure the lamp holder to the square support.

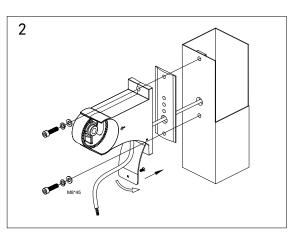


01

INSTALLATION INSTRUCTIONS

3.Refer to picture 3.1 and 3.2 using the machine screws (M10*35) secure the lamp holder to the lamp holder, connect the wires correctly and put the wires into the lamp pole.

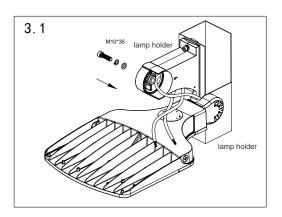

4.Refer to picture 4 using the machine screws secure the lamp holder.

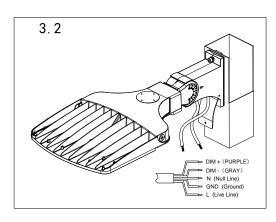

5.Refer to picture 5 locking bolt can be only compatible with a lamp pole that the outer diameter is ϕ 60, lamp adjustable angle is 0-90°.

